



- |                      |                  |                        |                 |                     |                     |
|----------------------|------------------|------------------------|-----------------|---------------------|---------------------|
| 01. Crankcase        | 14. Piston pin   | 27. Elbow exhaust      | 40. Bearing     | 53. Cushion foot    | 66. Exhaust         |
| 02. Crank shaft      | 15. Piston       | 28. Cylinder head      | 41. Rotator     | 54. Washer          | 67. Check valve     |
| 03. Gasket           | 16. Piston ring  | 29. Spring             | 42. Bearing     | 55. Bolt            | 68. Exhaust nut     |
| 04. Crank case cover | 17. Piston ring  | 30. Bolt               | 43. Oil sealing | 56. Handle          | 69. Exhaust pipe    |
| 05. Bolt             | 18. Gasket       | 31. Air filter         | 44. Tank        | 57. Safety valve    | 70. Plug            |
| 06. Gasket           | 19. Cylinder     | 32. Capacitance        | 45. Nut         | 58. Pressure switch | 71. Electrical wire |
| 07. Oil glass        | 20. Spring       | 33. Spring             | 46. Washer      | 59. Pressure gauge  |                     |
| 08. Bolt             | 21. Bolt         | 34. Bolt               | 47. Wheel       | 60. Connect         |                     |
| 09. Spring           | 22. Valve gasket | 35. Cover              | 48. Washer      | 61. Regulator       |                     |
| 10. Breath           | 23. Valve        | 36. Bolt               | 49. Bolt        | 62. Air cock        |                     |
| 11. Bolt             | 24. Valve plate  | 37. Fan                | 50. Drain cook  | 63. Pressure gauge  |                     |
| 12. Connecting rod   | 25. Gasket       | 38. Rear bearing crank | 51. Bolt        | 64. Unloading nut   |                     |
| 13. Circlip          | 26. head gasket  | 39. Stator             | 52. Washer      | 65. Unloading pipe  |                     |